

# INTERNAL PADDING GUIDE

This guide illustrates how to configure the internal padding correctly for a selection of popular DJ controllers.



## EQUIPMENT

Pioneer DDJ SZ	No Padding
Pioneer XDJ RX	Use Padding <b>A</b> <b>B</b>
Numark NS7 II	Use Padding <b>A</b> <b>B</b> <b>C</b>
Numark NS7 FX	Use Padding <b>A</b> <b>B</b> <b>C</b>
Denon DJ MCX 8000	Use Padding <b>A</b> <b>B</b>